





**FOR YOUR SAFETY AND PROPER PRODUCT PERFORMANCE**  
**MUST BE SHOT ONLY WITH BLADES IN THE CLOSED POSITION.**  
**MUST NEVER BE SHOT WITHOUT RETENTION CLIPS PROPERLY INSTALLED.**  
**RETENTION CLIPS AND PIVOT SCREWS MUST BE REPLACED AFTER IMPACT HAS OPENED THE BLADES (5) TIMES.**  
**MUST NEVER BE SHOT WHEN DAMAGED.**  
**MUST BE CHECKED FOR DEBRIS AND DAMAGE AFTER EVERY SHOT.**  
**BLADES SHOULD BE REPLACED AFTER EVERY HUNTING SHOT—ETHICAL HUNTERS USE ONLY RAZOR SHARP BLADES.**  
**NOTE: BLADES MAY SNAP SHUT AFTER PASSING THROUGH TARGET.**

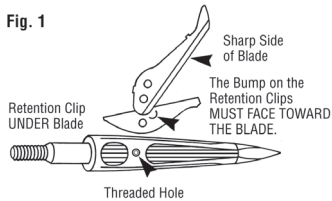

**DISASSEMBLY**

1. With blades closed remove pivot screws with the screwdriver provided.
2. Carefully remove blades and retention clips.

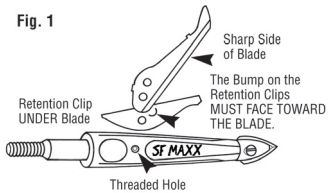

**ASSEMBLY**

1. Sandwich blade retention clip and blade together (Fig. 1).
2. Insert into ferrule slot. **NOTE: Sharp edge of blade must face slot in ferrule.**
3. Align holes in ferrule, blade and retention clip.
4. Insert pivot screw in threaded hole and tighten with screwdriver.
5. Repeat above steps for remaining blades.

**HANDLE WITH EXTREME CAUTION**

This product may be extremely dangerous and will cause injury if handled improperly. To avoid injury use the enclosed safety wrench when attaching and removing broadhead. Store heads in quiver after assembly.

NEW ARCHERY PRODUCTS CORP. PRODUCTS ARE PATENTED OR LICENCES BY ONE OR MORE OF THE FOLLOWING U.S. PATENTS. OTHER PATENTS PENDING.

5106602;	5526799;	5743245;	5564713;	5722381;	5871410;	5941784;
6044832;	6050251;	6089216;	6102020;	6142896;	6174252;	6186135;
6213114;	6258000;	6290903;	6398676;	6431162;	6494196;	6634349;
6684874;	6782881;	6910472;	6913008;	6915791;	6939258;	6942551;
6958023;	7025697;	7037222;	7047959;	7074143;	7165543;	7232390

