


## Thunderhead® XP Installation Instructions

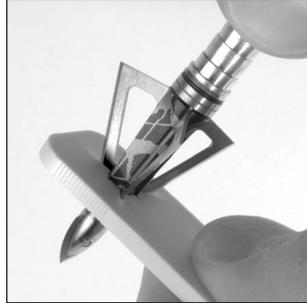

1. Remove broadhead from tray and insert into wrench (supplied).
2. Carefully unscrew retaining insert.
3. Screw arrow shaft onto broadhead until tight.

**NOTE:** If using carbon arrow, be sure to use N.A.P. UBAR Adapter Rings supplied in package.

**NOTE:** There is no need to align blades and fletchings.

## Thunderhead® XP Replacement Blade Installation Instructions

1. Remove broadhead from tray and insert into wrench (supplied).
2. Carefully unscrew retaining insert.
3. Screw arrow shaft onto broadhead until tight.

### MINI-BLADE REPLACEMENT

1. Using the provided screwdriver remove the mini-blade tip screw.
2. Use pliers to grab blade edges and pull mini-blade from broadhead tip.
3. Insert new mini-blade into end of safety wrench provided with your original Thunderhead® XP100 broadhead purchase (FIG. 1).

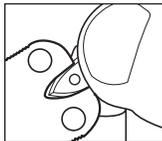


FIG. 1

4. Slip broadhead point over mini-blade.
5. Snug screw and spin test for alignment.
6. If broadhead wobbles, realign mini-blade and spin test. Repeat if necessary until arrow spins true.
7. Tighten mini-blade tip screw.

**CAUTION - This product may be extremely dangerous and will cause injury if handled improperly. To avoid injury use the enclosed safety wrench when attaching and removing broadhead. Store heads in quiver after assembly.**